
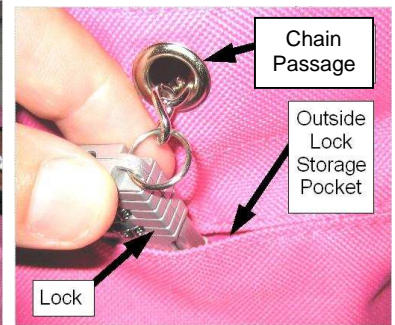


# The *Keep your stuff safe* Bag

Thank you for purchasing a Kyss Bag. We trust that you will be completely satisfied with the versatility and security features of this product.

**To Use** - To use the Safe Tote Security System, close the dual zipper sliders together so that the locking rings on each slider are lined up. Remove the lock from outside storage pocket. Pull the chain out of the bag through the chain passage. Wrap chain around or through anchor objects such as a table, chair, railing, cooler handle, etc. Clip the hook of the lock through the locking ring on each zipper slider. Spin lock dials to lock.

**To Put Away** - Hold the lock in your hand above the chain passage and let the chain glide back into the bag. For best functionality make sure the chain passage reinforcement material is bowed slightly outward and that the chain is collected in the Inside Chain Storage Pocket. If necessary to enhance retraction of the chain, we recommend that you attach an additional key ring or other weighted object to the inside end of the chain.

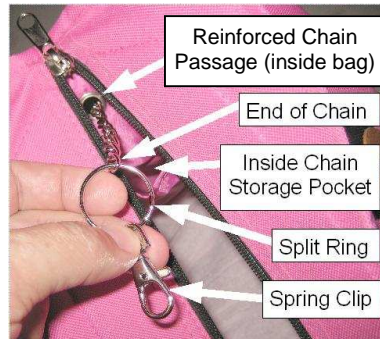

**Important** - Before locking lock, always remember to check lock dials to refresh your memory and confirm the correct combination. Lock will only open if lock dials are set to the correct combination. One idea is to pick a very easy combination (like 7-7-7) that you will never forget. Also remember that the lock dials are viewable from both sides of the lock and thus show a different combination on each side. However, one side of the lock has indented leader lines between dials. This is the side that is designed to display the actual combination of the lock.

## Setting the Lock Combination

The lock is set at the manufacturer to open at 0-0-0. You can keep it as your own combination or set a new one by following these steps:

- 1) With the lock dials set at the current combination, use a pen point to push & hold in the Combo Reset Button at the bottom of the lock.
- 2) While keeping the Combo Reset Button pushed in, turn the dials to your desired new three-digit combination
- 3) Release the combo reset button
- 4) Your new combination has now been set.

## Bag Care

**Cleaning** - We recommend that all of our products be spot cleaned with warm water and mild detergent and air-dried in the shade.

**Exposure to Moisture** - The security chain and lock assembly that comes with your Kyss Bag is made from materials that are highly resistant to water damage and rusting. However, these components are not designed to be subject to prolonged exposure to water or moisture. In the event that the chain components, the lock or the bag itself is soaked with water, remove the chain and lock assembly from the bag and allow to dry in air. Reassemble the lock and chain assembly to the bag when the components are once again dry.

**Re-Assembly** - Remove the split-ring key ring from the end of the chain. Pass that end of the chain through the chain passage from outside the bag. Reattach the split-ring key ring to the end of the chain. Attach the spring clip to the split-ring key ring. Retract the chain into the bag and place it in the Chain Storage Pocket under the chain passage inside the bag. Place the lock in the Lock Storage Pocket on outside of bag under the chain passage.

## Liability

Reminder: The Safe Tote Security System is a theft **deterrent** system, not a security guarantee. Larson Product Development, LLC (LPD) WILL NOT BE RESPONSIBLE FOR ANY PROPERTY OR POSSESSIONS THAT ARE STOLEN, LOST OR DAMAGED WHILE USING ANY KYSS TOTE BAG PRODUCT. Any bag security feature can be overcome by a determined thief with the right tools, enough privacy and the right opportunity. Therefore, always use your Kyss Tote Bag in a public place where potential eyewitnesses to tampering or theft add to the theft deterring nature of the product. And always periodically check on the security of your belongings.

LPD shall not be responsible for the natural breakdown of materials that occurs inevitably with extended use, or defects caused by accident, abuse, misuse, improper care, animal attack, alteration, or normal wear and tear. In no event will LPD be liable for incidental or consequential damages.